



### Set the system

#### Fullset the system with your PIN

1) Enter your PIN	2) <b>Within 2 seconds,</b> press <b>Fullset (H)</b>	
----------------------	--	--

#### Results:

- The keypad buzzer beeps
- Area (A)** flashes to indicate that the Entry/Exit time is counting down.

When the area is fullset, **Area (A)** and **Fullset (H)** flash red to confirm.



#### Fullset the system with RFID fob

1) Press <b>Fullset (H)</b>	2) <b>Within 2 seconds,</b> present the fob to the <b>RFID Sensor (G)</b>	
--------------------------------	---	--

#### Results:

- The **RFID Sensor (G)** flashes white.
- The area starts to set.

#### Fullset the system with PIN and RFID fob

1) Press <b>Fullset (H)</b>	2) <b>Within 2 seconds,</b> present the fob to the <b>RFID Sensor (G)</b>	
3) Enter your PIN	4) Press <b>Fullset (H)</b> again	

#### Results:

- The keypad buzzer beeps
- Area (A)** flashes to indicate that the Entry/Exit time is counting down.

When the area is fullset, **Area (A)** and **Fullset (H)** flash red to confirm.



### Partset the system

#### Partset the system with your PIN

1) Enter your PIN	2) <b>Within 2 seconds,</b> press <b>Partset (F)</b>	
----------------------	--	--

When the area is Partset, **Area (A)** and **Partset (F)** illuminate red for 2 seconds.



#### Partset the system with RFID fob

1) Press <b>Partset (F)</b>	2) <b>Within 2 seconds,</b> present the fob to the <b>RFID Sensor (G)</b>	
--------------------------------	---	--

#### Results:

- The **RFID Sensor (G)** flashes white.

When the area is Partset A, **Fullset (H)** and **Partset (F)** illuminate red for approximately 2 seconds.



#### Partset the system with PIN and Fob

When the SPC Panel option **PIN and Pace** is enabled, you can use your **PIN** and fob together for dual authorisation.

1) Press <b>Partset (F)</b>	2) <b>Within 2 seconds,</b> present the fob to the <b>RFID Sensor (G)</b>	
3) Enter your PIN	4) Press <b>Partset (F)</b> again	

### Unset the system

#### Unset the system with your PIN

1) Enter your PIN	2) Press <b>Enter</b>	
----------------------	--------------------------	--

When the area is unset, the **Area Icon** illuminates green for 2 seconds.



#### Unset the system with RFID fob

1) Press <b>Enter</b>	2) <b>Within 2 seconds,</b> present the fob to the <b>RFID Sensor (G)</b>	
--------------------------	---	--

When the area is unset, the **Area Icon** illuminates green for 2 seconds.



#### Unset the system with PIN and RFID fob

1) Press <b>Enter</b>	2) <b>Within 2 seconds,</b> present the fob to the <b>RFID Sensor (G)</b>	
3) Enter your PIN	4) Press <b>Enter</b> again	

Name	LED
<b>A Area</b>	Green/Red
<b>B Not Ready</b>	Red
<b>C Alarm</b>	Red
<b>D Alert</b>	Red
<b>E SOS (Fire)</b>	Keypad backlight - Blue
<b>F Partset</b>	Keypad backlight - Blue
<b>G RFID Sensor</b>	White
<b>H Fullset</b>	Red, Blue backlight
<b>I SOS (Medical)</b>	Keypad backlight - Blue

## Panic alarm

### Generate a Panic alarm

Press and hold both <b>SOS</b> keys ( <b>E, I</b> ) at the same time for 3 seconds.

#### Results:

- Panic output and bell output on.
- Keypad buzzer beeps
- **Alarm (C)** flashes for 30 seconds.
- Panic alarm sent to central station.



### Generate a silent Panic alarm

Press and hold both <b>SOS</b> keys ( <b>E, I</b> ) at the same time for 3 seconds.

#### Results:

- Panic output on
- Panic alarm sent to central station.

**Note:** No bell outputs or buzzer or flashing icons.

### Clear a Panic alarm

1) Enter your <b>PIN</b>	2) Press <b>Enter</b>	
-----------------------------	--------------------------	--

## Fire alarm

### Generate your system Fire alarm

Press <b>Partset (F)</b> and <b>SOS (Fire) (E)</b> at the same time for 3 seconds.	

#### Results:

- Fire outputs on
- Bell outputs on
- Keypad buzzer beep
- **Alarm (C)** flashes for 30 seconds.
- Fire alarm sent to central station.



### Clear a Fire alarm

1) Enter your <b>PIN</b>	2) Press <b>Enter</b>	
-----------------------------	--------------------------	--

## Medical alert

### Set off a Medical alarm

	Press <b>Fullset (H)</b> and <b>SOS (Medical) (I)</b> key at the same time for 3 seconds.
--	---

#### Results:

- Medic output on.
- Keypad buzzer beeps.
- **Alarm (C)** flashes for 30 seconds.
- Medical alarm sent to central station.

No bell outputs.

### Clear a Medical alert

1) Enter your <b>PIN</b>	2) Press <b>Enter</b>	
-----------------------------	--------------------------	--

## Audio indications

Your service provider can configure the audio options for your keypad. Contact your installer to discuss your requirements.

Audio indications can include the following:

- **Volume**  
Set the keypad speaker volume for alarm indications
- **Keypress**  
Turn on/off the sound when you press a key
- **Partset buzzer**  
Turn on/off the buzzer during Entry or Exit when you Partset your system.
- **Quiet Mode**  
Turn on Quiet Mode to disable the entry buzzer, the exit buzzer, and the setting buzzer.

## Icons

<b>Area (A)</b>	<b>Not Ready (B)</b>	<b>Alarm (C)</b>	<b>Alert (D)</b>

### Area (A)

**Area (A)** illuminates to show the following conditions:

	Red when Fullset
	Green when Unset
	Flashing Red for Entry/Exit.

### Not Ready (B)

**Not Ready (B)** illuminates to show the following conditions:

	<b>Not Ready (B)</b> illuminates red when Zone is open
	<b>Not Ready and Alert (D)</b> illuminate red when you try to set the system with a fault.

### Alarm (C)

**Alarm (C)** flashes red to show the following conditions:

	<p><b>Failed to set area</b> If the area fails to set, <b>Alarm (C)</b> flashes and keypad beeps for 30 seconds.</p> <p><b>Panic/Medical/Fire</b> On Panic/Medical/Fire alert, <b>Alarm (C)</b> flashes red for 30 seconds.</p>
--	---

### Area fullset, Zone open

When area is Fullset and a zone is open this creates a Burglary alarm.

All icons flash red and the keypad buzzer beeps for 30 seconds.



## Alert (D)

**Alert (D)** illuminates to show the following conditions:

	<p><b>Alert (D)</b> illuminates to show a Battery fault or a Mains fault. To clear, resolve the issue, enter your <b>PIN</b> and press <b>Enter</b>.</p>	
	<p><b>Alert (D)</b> illuminates to show a Modem fault. To clear, resolve the issue, enter your <b>PIN</b> and press <b>Enter</b>.</p>	

- **24-hour zone** - all icons flash for 30 seconds.  
To clear alerts enter your PIN and select the enter key
- **Burglar alarm** - all icons flash for 30 seconds.  
To clear alerts enter your PIN and select the enter key
- **Entry time out** - all icons flash for 30 seconds.  
To clear alerts enter your PIN and select the enter key

## CONTACT DETAILS

Use this area to record the contact details for your installer

<b>Name</b>	
<b>Phone</b>	
<b>Email</b>	